 


INSTRUCTION MANUAL

Dry Vacuum Cleaner

V 15

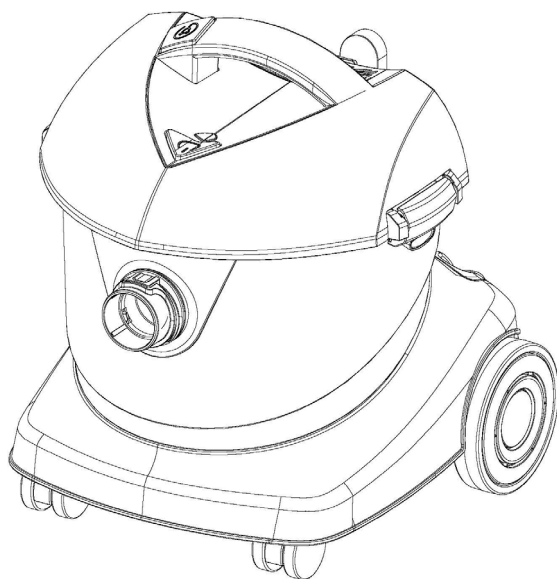

 
Please read the instruction manual carefully before operation and well preserve it

CAUTION

Don't pull the cord to unplug, when you would like to retract the cable, hold the plug and then press the retractor button.



Keep off from ovens and stoves, etc.

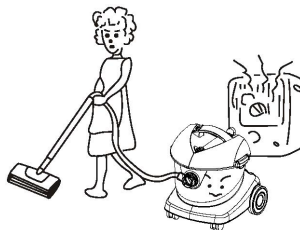

Don't suck at large fragments or sharp objects.



Don't wrest, tramp and haul the hose.



Warning: Never use this machine when the suction power becomes very weak. When this happens, please check if the dust bag is full (see **TO REPLACE DUST BAG**); Then check both filters if they are dirty (see **MAINTENANCE**); At last check the floor brush, tube, hose if any part is jammed.

Don't use the machine until it comes normal. If the problem remains, please submit to Repairing Center.

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

SAFETY DIRECTIONS

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed, including the following:

 
 
READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER.

WARNING


To reduce the risk of fire, electric shock, or injury:

- Do not use outdoors.
- Do not leave vacuum cleaner when plugged in. Turn off the switch and unplug the electrical cord when not in use and before servicing.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturers' recommended attachments.
- Do not use with damaged cord or plug.
- Do not pull or carry by cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.
- Do not use extension cords or outlets with inadequate current carrying capacity.
- Turn off all controls before unplugging.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands or operate without shoes.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- This vacuum cleaner creates suction and contains a revolving brushroll. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust bag or filter in place.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids such as gasoline, or use in areas where they may be present.
- Store your cleaner indoors in a cool, dry area.
- ENSURE you turn the unit off at the very minimum every 15 minutes (for 1 minute) to let the motor cool down - failure to do so may cause motor failure.
- DO NOT use this unit for more than 4 hours (including rest breaks) on any given day.


PARTS NAME

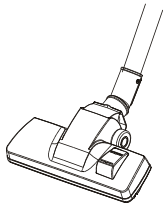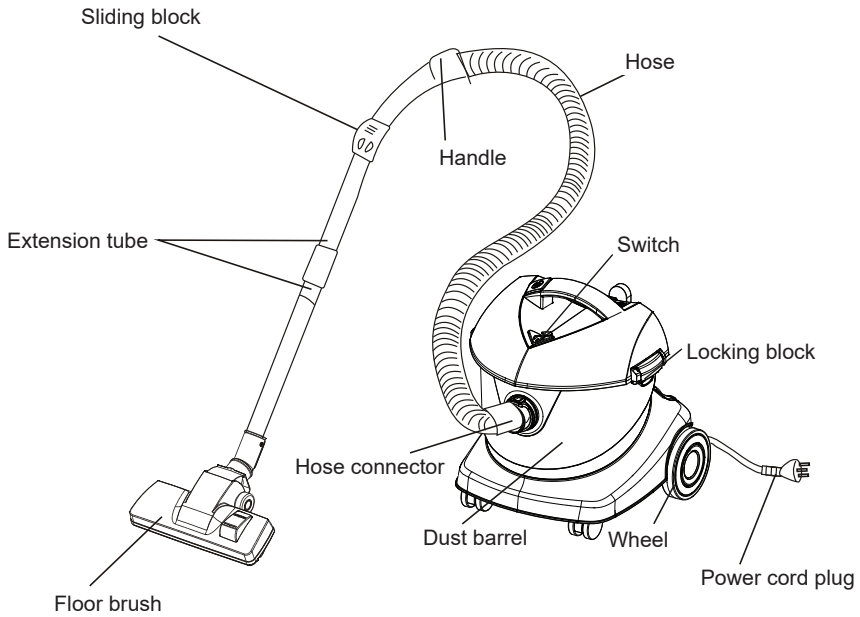

 Floor brush for carpet and wooden floor, etc.

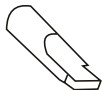

 
Crevice nozzle for corners, cracks, etc.

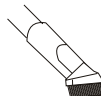

Bristle brush for sofa, bookshelf, curtain and furniture, etc.


OPERATION METHOD

 1

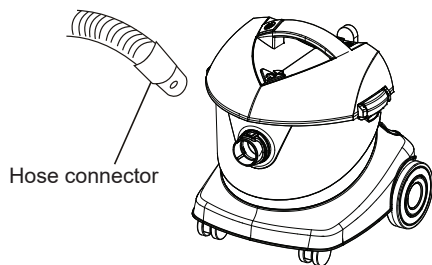


Insert the hose connector into the swivel of the Vacuum Cleaner.

 2

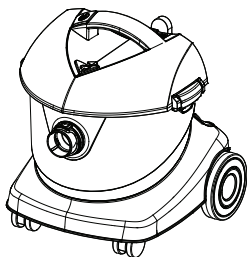


Hold the plug and insert into socket

 3

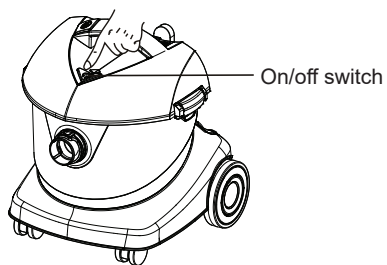

Press the switch button to turn on/off the cleaner

 
4

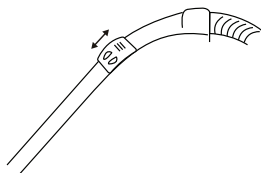

You can adjust the airflow by push the sliding block up and down.


OPERATION METHOD

 1

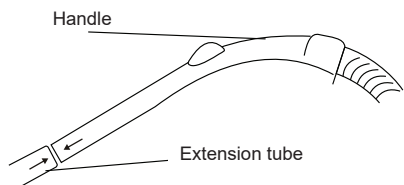


Insert the handle into the tube with a twisting force.

 2

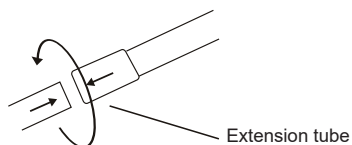


Same as above.

 3

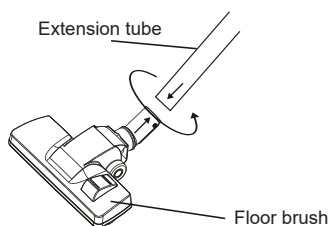

Same as above.

 4

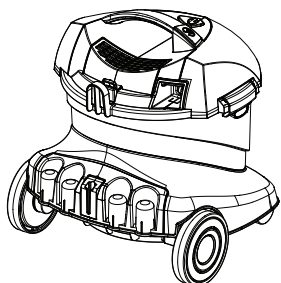


Accessories storage

TO REPLACE DUST BAG


The cleaner can't be used without dust bag.
If dust bag broken or full, please replace/clean it as soon as possible.

 1

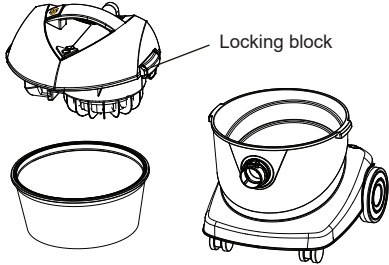


Release the lock block
to open the up housing

 2

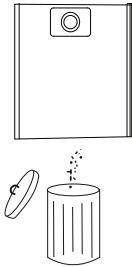

Through the dust bag
into dustbin after use

 3

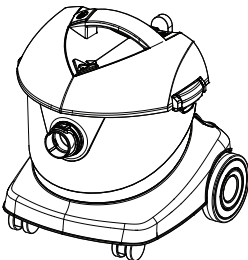


Put back the up
housing, and fasten the
locking block

MAINTENANCE

Warning: When the filters are obviously covered with dust or the suction decreases considerably, please clean it in time, for this can improve the working efficiency and extend the life time of the cleaner.

Never use the machine without filters.

 1

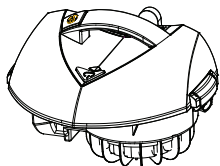

Take off the filters

2



Clean it carefully

3



Dry by airing

EN Safety warnings for vacuum cleaners



8050791
ed. 09/2025



CONTENTS

(Translation of original instructions)

1.1 - INTRODUCTION	1
1.2 - GENERAL WARNINGS	2
1.3 - UNPACKING	3
1.4 - DISPOSING OF THE APPLIANCE	3
1.5 - REFERENCE LEGISLATIONS	3

1.1 - INTRODUCTION



WARNING:

Before using the appliance, please read this manual and the “Operation and Maintenance” manual supplied with the machine carefully.

This manual and the “Operation and Maintenance” manual form an integral part of the machine itself. They must therefore be kept in a safe place where they are accessible to all users (operators and maintenance personnel) throughout the life of the machine until it is scrapped.

1.1.a - Purpose of the manual

The purpose of the manual is to provide the instructions necessary for putting into service, using and maintaining the machine with which it is enclosed.

It is advisable to read the instructions carefully and comply with the safety standards described in the manual to the letter.

The non-observance of these instructions/standards may cause damage to the machine and injury to the operator for which under no circumstances is the manufacturer responsible.

The safety information described in the manual supplements and DOES NOT REPLACE standards in force in the country in which the machine is used.

1.1.b - Consulting the manual

The manual is divided into chapters according to a logical order of knowledge and use of the machine.

1.1.c - Key to symbols used in the manual

In order to highlight information and procedures regarding safety, maintenance etc., the following symbols have been adopted in the manual:



DANGER:

Warns of a serious, even fatal danger for the safety of the operator and/or third persons.



WARNING:

Extremely important information in order to prevent serious damage to the machine and the environment in which it operates.



N.B.:

Additional information for correct machine operation or of a general nature.

1.2 - GENERAL WARNINGS

- Plastic bags, polystyrene, paper clips, etc. must not be left within the reach of children, as these are potential sources of danger.
- Ensure that the voltage matches that indicated on the data plate before turning the appliance on.
- To unplug the appliance from the socket, pull the plug itself and NOT the cable.
- Unwind the entire power cable when using the appliance.
- Solely approved extension cables can be used. These must be adequate for the power of the appliance and must also be in good condition.
- Do not use the appliance if either the plug or power cable is not in good condition.
- If the power cable is damaged, this can only be replaced by a technical support centre that is authorised by the manufacturer.
- Do not slide the power cable on sharp edges.
- Do not pinch or crush the power cable.
- Do not use the appliance with wet or damp hands.
- Do not leave the appliance exposed to the elements.
- Operating temperature between 5°C and 40°C; humidity between 20% and 60%; atmospheric pressure between 990 hPa and 1040 hPa.
- Do not use the appliance if its operation is faulty. Take this to an authorised technical support centre.
- Should an anomaly arise, contact an authorised technical support centre and always request original spare parts.
- Never leave the device unattended when it is not switched off and with the mains plug or the battery pack removed.
- The plug must be removed from the socket before any maintenance or cleaning procedures are implemented.
- Do not wash the appliance with jets of water.
- Do not immerse the appliance into water or other liquids.
- Clean the appliance with a cloth dampened with water; do not use abrasive detergents, trichloroethene or solvents.
- When depositing the unusable appliance at appropriate collection points, the power cord must be removed in order to ensure it is not used.

- This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge.
- Children should be supervised to ensure that they do not play with the appliance.
- This vacuum cleaner is suitable for collective use: for example in hotels, schools, factories, shops, etc.

1.3 - UNPACKING

After removing the package as indicated in the instructions shown on the package itself, check the integrity of the appliance and all components supplied.

If any evident damage is noticed, contact the retailer or an authorised technical support centre.

1.4 - DISPOSING OF THE APPLIANCE

Proceed in accordance with local legislation in order to protect the environment. When the appliance is unusable and cannot be repaired, the components are to be disposed of accordingly and separately.

In accordance with the implementation of Directives 2012/19/EU - 2011/65/EU, on the restriction of the use of dangerous substances in electric and electronic equipment and the disposal of waste materials, electrical equipment cannot be disposed of as urban waste but sepa-

rate collection and proper disposal must be observed. electrical devices cannot be disposed of as urban waste, but separate collection and proper disposal must be ensured.



Electrical equipment has a symbol bearing a crossed out wheeled bin. The symbol indicates that the apparatus was introduced on the market after 13th August 2005 and must be disposed off separately.

Improper or illegal disposal of such equipment or using it incorrectly, can be hazardous to persons and the environment due to the substances and materials contained. Administrative and criminal penalties will be imposed for non-compliance with standards pertaining to the disposal of electrical waste.

1.5 - REFERENCE LEGISLATIONS

The appliance has been manufactured in compliance with the Machinery Directive in force and in accordance with the standards indicated in the “CE” Declaration of Conformity.



8050738
ed. 09/2025





Declaration of EC conformity

We hereby declare that the machine described below complies with the relevant basic safety and health requirements of the EU Directives, both in its basic design and construction as well as in the version put into circulation by us. This declaration shall cease to be valid if the machine is modified without our prior approval.

Product

VACUUM CLEANER

MODEL

V 15

CODE

12451210001

Relevant EU Directives

2006/42/CE

2014/30/UE

2011/65/UE

2009/125/CE

Applied harmonized standards

EN 60335-1

EN 60335-2-69

EN IEC 63000

Applied regulations

666/2013

Name and position of the person authorised to sign the Declaration: Giuseppe Riello,
Chief Executive Officer of Riello Cleaning
Machines S.p.A.

Signature



Giuseppe Riello

Dorno (PV), 09/2025

DEALER



Riello Cleaning Machines S.p.A.

Registered Office

Via Enrico Fermi, 43 - 37136 Verona (VR) - Italy

Headquarters

Via Circonvallazione, 5 - 27020 Dorno (PV) - Italy

P. +39 0382 848811 - F. +39 0382 84668 - M. info@riellocm.com



ghibli.com

