

AS 5 NEXT / 807 NEXT

Cord / BC Lithium




EN Use and Maintenance



8060126
ed. 01/2026



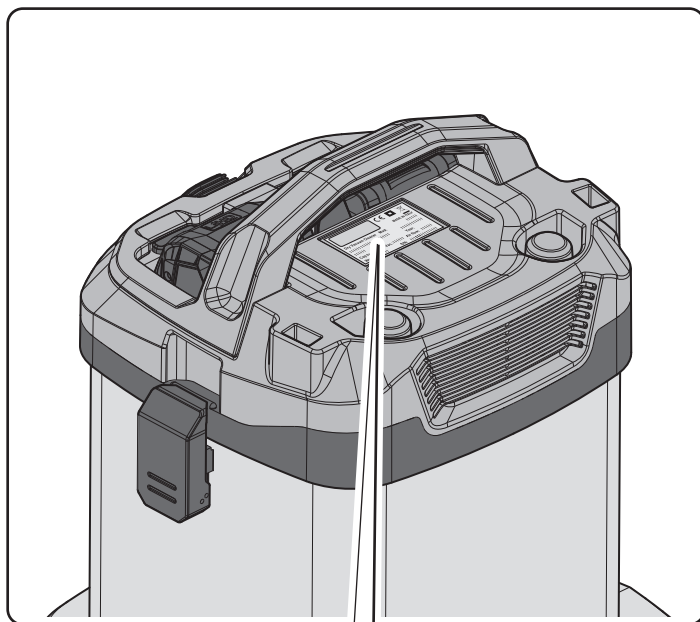

1 — []

CE [] []

MADE IN ITALY

Dry Vacuum Cleaner Mod: [] 2

9 — [] 3

[]

Year: []

Cap.ty: [] 4 Vac.: [] 5 Air flow: [] 6

Weight: [] 7 S/N: [] 8

	1	2	3
IT	Produttore	Modello	Articolo
EN	Manufacturer	Model	Article
FR	Producteur	Modèle	Article
DE	Hersteller	Modell	Artikel
ES	Fabricante	Modelo	Artículo
PT	Produtor	Modelo	Artigo
NL	Producent	Model	Artikel
CS	Výrobce	Model	Typ
RU	Изготовитель	Модель	Артикул
PL	Producent	Model	Artykuł
AR	الصانع	الطراز	النوع

	4	5	6
IT	Capacità fusto	Capacità aspirazione	Portata d'aria
EN	Container capacity	Vacuum	Air flow
FR	Capacité de la cuve	Capacité d'aspiration	Débit d'air
DE	Fassungsvermögen des Körpers	Ansaugleistung	Luftdurchsatz
ES	Capacidad del bidón	Capacidad de aspiración	Caudal de aire
PT	Capacidade do reservatório	Capacidade de aspiração	Caudal de ar
NL	Inhoud reservoir	Zuigcapaciteit	Luchtdebiet
CS	Obsah nádoby	Sací výkon	Množství dopravovaného vzduchu
RU	Емкость бака	Мощность всасывания	Расход воздуха
PL	Pojemność zbiornika	Podciśnienie (mbar)	Przepływ powietrza
AR	سعة الخزان	قدرة الشفط	تدفق الهواء

	7	8	9
IT	Peso macchina	N° Matricola	Caratteristiche elettriche
EN	Machine weight	Serial N°	Electrical characteristics
FR	Poids machine	N° Matricule	Caractéristiques électriques
DE	Maschinengewicht	Matrikelnr.	Elektrische Eigenschaften
ES	Peso de la máquina	N° Matrícula	Características eléctricas
PT	Peso da máquina	Número de série	Características elétricas
NL	Machine gewicht	Serienummer	Elektrische eigenschappen
CS	Hmotnost stroje	Výrobní č.	Elektrické údaje
RU	Вес машины	Заводской №	Электрические характеристики
PL	Hmotnost stroje	Nr. Fabryczny	Właściwości elektryczne
AR	وزن الآلة	الرقم التسلسلي	المواصفات الكهربائية

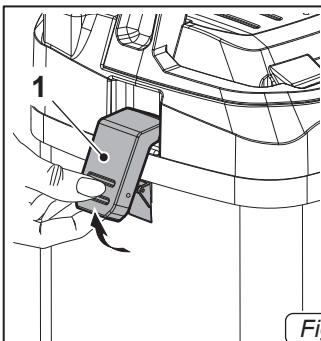


Fig. A

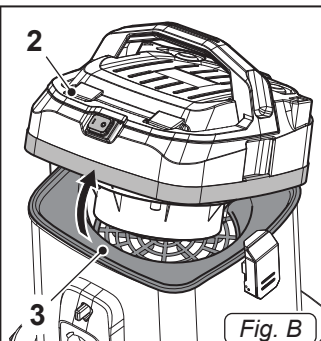
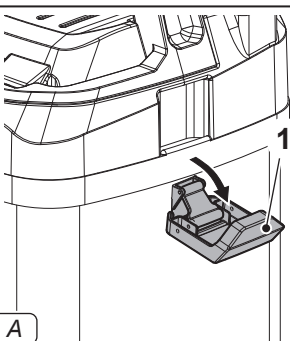


Fig. B

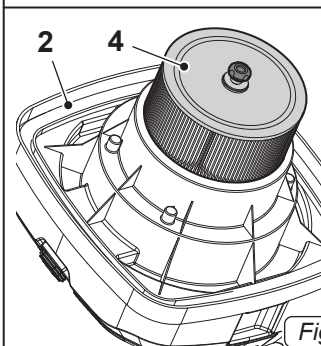


Fig. C

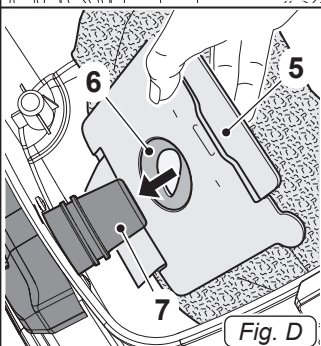
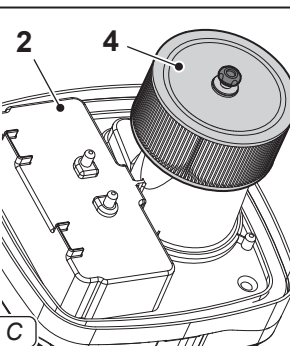


Fig. D

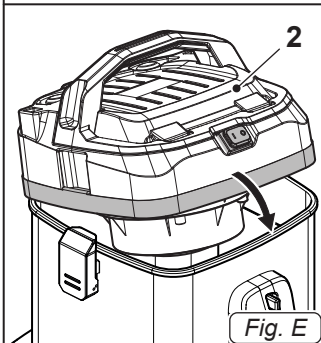


Fig. E

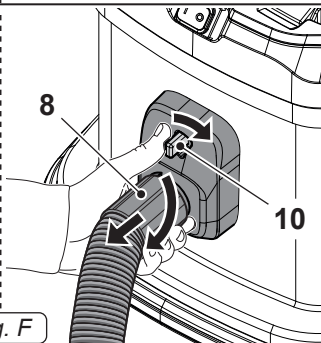
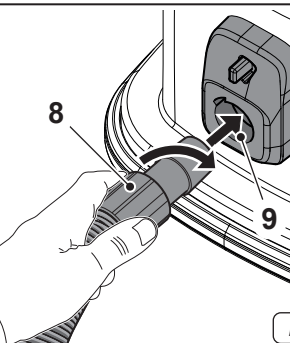


Fig. F

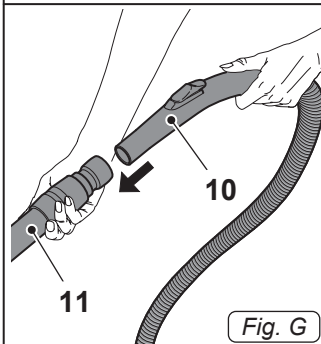


Fig. G

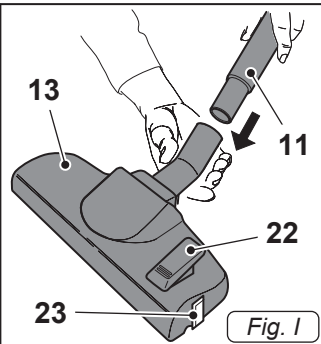
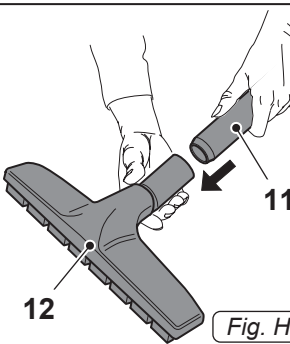


Fig. I

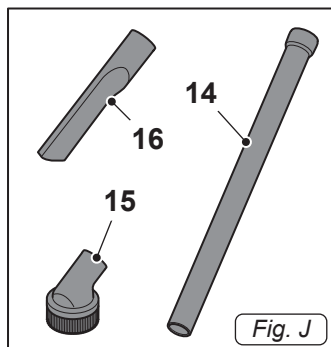


Fig. J

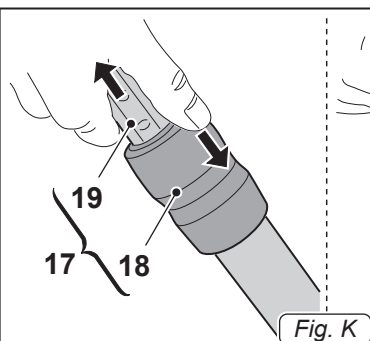


Fig. K

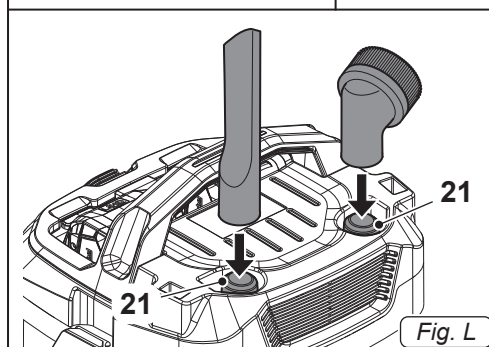
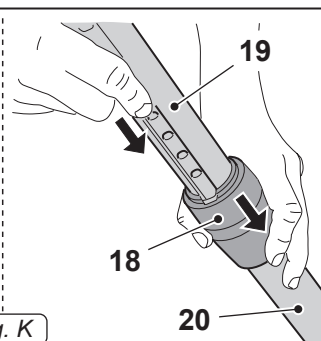


Fig. L

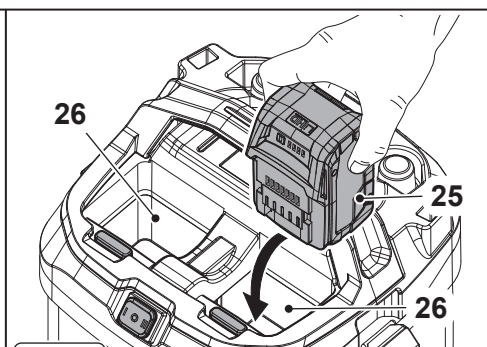


Fig. M

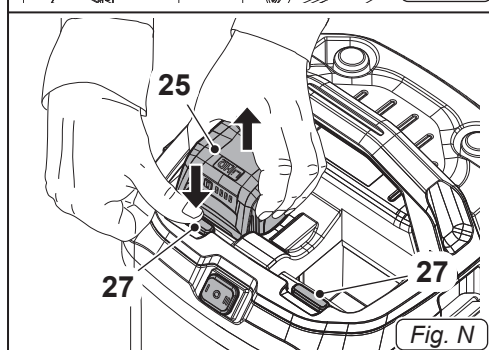


Fig. N

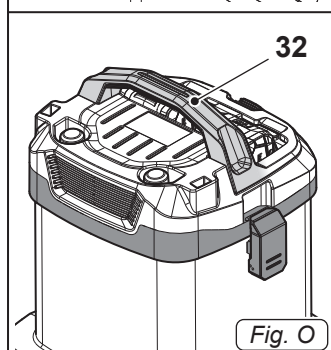
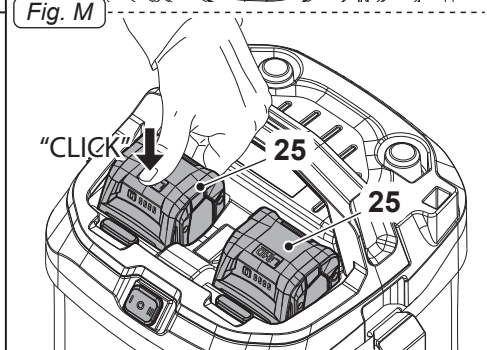


Fig. O

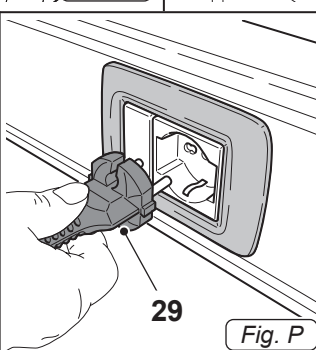


Fig. P








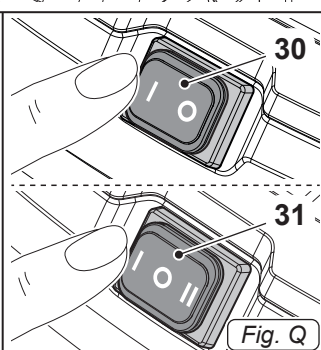


Fig. Q

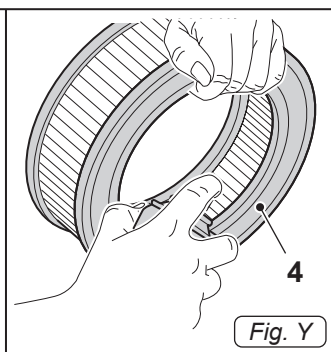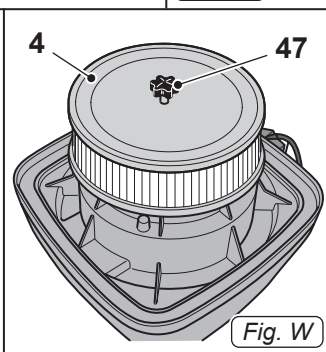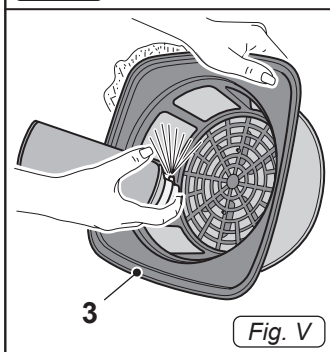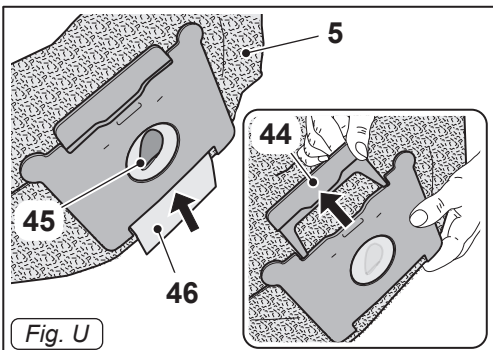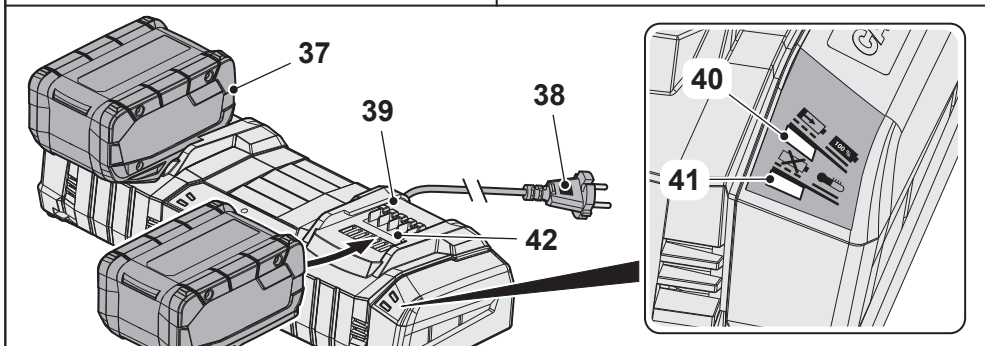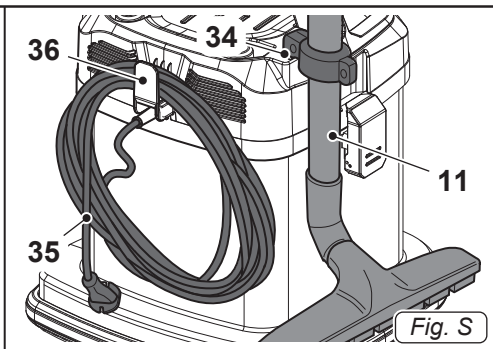

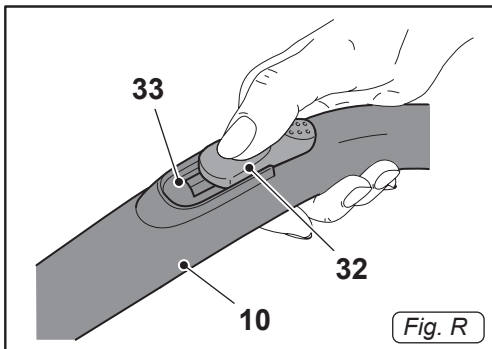

English..... ENGLISH - 1
(Translation of original instructions)

TECHNICAL FEATURES

AS 5 NEXT - 807 NEXT	CORD		BATTERY	
Dust suction device	■			
Voltage - Frequency	220 - 240 V~	50/60 Hz	36 V (2 x 18 V) 	
Nominal power (suction)	800 W	1000 W	600 W	
Sound pressure (LpA)	<70 dB(A)		STANDARD	<70 dB(A)
			BOOST	<70 dB(A)
IP code	IPX0			
Filter surface (fabric filter)	0,09 m²			
Filter surface (cartridge filter)	0,29 m²			
Air flow	46 l/s	50 l/s	38 l/s	
Suction	242 mbar	225 mbar	250 mbar	
Filter bag capacity	6 l			
Supply cable length	10 m		-	
Dimensions (L. x W. x H.)	350 x 350 x 485 mm			
Weight (without accessories)	6,4 kg (FT) 6,3 kg (FC)		5,35 Kg	
Suction tube diameters	ø33 mm			

INTRODUCTION



DANGER:

Before using the machine, carefully read the “Safety recommendations for vacuum cleaners” booklet, the warnings indicated in the “Instructions for use” booklets of the battery and battery charger attached to this manual and the additions reported below.



WARNING:

Battery

- Do not tamper with the contact pins of the batteries with metal objects, as a short circuit may occur between the poles.
- Do not leave the batteries or the device in the sun for several minutes.
- Warning! Use only original batteries; DO NOT tamper with the batteries.
- Be careful that the batteries do not receive impacts, the external casing could break.

Battery Charger

- Use only the provided charger and no other type.
Do not use the charger for charging other batteries; it could be damaged.
- Avoid damaging or crushing the charger cable during use.
- Never pull the charger by the cable.
- Extension cables must have a section equal or bigger than the cable.
- Never pull the cord to unplug the charger.

TYPE OF USE

Use this device only as a vacuum cleaner to suck up dust, crumbs, etc...

Uses different from those listed above are not allowed.

Any use different from the one for which the appliance has been built represents an anomalous condition which could harm the appliance and constitute a serious hazard for the user.



DANGER:

The manufacturer can not be held responsible for any damage due to improper or incorrect use.

Any other use releases the manufacturer from liability for harm to persons and/or property and invalidates any warranty condition.



WARNING:

Vacuum dry material only.

Do not use the appliance to:

- Vacuum liquids of any kind.
- Vacuum hot substances.
- Vacuum incandescent, flammable, explosive, toxic substances/mixtures.

This appliance is not suitable for collecting dangerous dust.

Do not use the appliance in environments with risk of explosion.

Operators must be adequately trained in the use of this appliance.



WARNING:

Do not use outdoors.

This appliance must be stored, taking its weight into consideration, on a solid, steady, safe and not sloping plane, indoor and in a dry area.

PREPARING THE APPLIANCE

Control filter systems



NOTE:

The vacuum cleaner is assembled and packaged with all filters already mounted and ready for use.

- Release the levers (1 Fig. A) and remove the lid (2 Fig. B) complete with fleece bag (3 Fig. B).
- (For FT cord model) Remove the polyester filter (3 Fig. B).
- (For FC cord and battery models) Turn the cover (2 Fig. B) and check for the presence of the cartridge filter (4 Fig. C).
- Check that the fleece bag (5 Fig. D) is fitted inside the appliance.
- If the fleece bag (5 Fig. D) is not present, fit it by inserting the hole (6 Fig. D) with the gasket into the nozzle (7 Fig. D) until the bag rests against the wall of the drum.
- Replace the lid (2 Fig. E) and secure it using the levers (1 Fig. A).



WARNING:

Check regularly whether the fleece bag is full. Continued use with a full fleece bag reduces the suction power of the appliance.

Do not use a used fleece bag. The fleece bag is designed for single use. Repeated use of the same fleece bag can cause the cartridge filter to become clogged and may damage the vacuum cleaner.



NOTE:

(For FT cord model) If necessary, the vacuum cleaner can also be used with the canvas filter only (4 Fig. B).

Assembling the pipes

- Insert the sleeve (8 Fig. C) of the suction pipe into the nozzle (9 Fig. C) on the barrel, turning it and pushing it all the way in.
- To release the sleeve (8 Fig. C), press and hold the button (10 Fig. C), then turn slightly and pull the sleeve (8 Fig. C) outwards.
- Attach the two fixed extensions or the telescopic extension (11 Fig. G) to the ergonomic handle (10 Fig. G) of the flexible hose (depending on the model).
- Attach the desired accessory to the extension (11 Fig. H):
 - (For cord models) Dust floor nozzle (12 Fig. H).
 - (For battery model) Multi-purpose dust nozzle (13 Fig. I).
 - Rigid extension (14 Fig. J).
 - Brush nozzle (15 Fig. J).
 - Crevice nozzle (16 Fig. J).



NOTE:

If necessary, accessories (dusting brush, crevice nozzle, curtain/sofa nozzle) can be mounted directly to the ergonomic handle.

Using the telescopic tube

(For battery model)

- The length of the telescopic tube (17 Fig. K) can be adjusted as follows:
- To extend the tube, press down on the ring nut (18 Fig. K) with your finger and simultaneously pull out the upper part (19 Fig. K) of the tube; once you have reached the desired length, release the ring nut (18 Fig. K) and the tube will lock into the nearest stop position;
- To shorten the telescopic tube, push down the ring nut (18 Fig. K) with one hand and reinsert the upper tube (19 Fig. K) into the lower sleeve (20 Fig. K) with the other hand.

Accessory storage

- There are slots (21 Fig. L) on the head of the appliance for storing accessories (brush nozzle and crevice nozzle).

Multi-purpose brush

(For battery model)

The multi-purpose brush should be used in the following ways:

- To clean hard floors, parquet, etc., press the lever (22 Fig. I) backwards to extend the bristles from the brush.
- To vacuum carpets, rugs, etc., press the lever forward (22 Fig. I) to retract the brush bristles.



NOTE:

To increase the suction power, move the side bars downwards (23 Fig. I).

First battery charge

(For battery model)

- Remove the charger and batteries from the packaging.
- Follow the instructions in the section entitled 'Charging the batteries' and those in the battery and charger 'instructions for use' booklets.



NOTE:

For further information on the operation of the charger and batteries, please refer to the relevant manuals.

Installing/removing batteries

(For battery model)

- Check that the power switch (31 Fig. P) on the control is in the "O" position.



NOTE:

If the power switch is left on "I" or "II" and the vacuum cleaner restarts or not, once the batteries have been replaced, reposition the switch to "O".

- Fit the batteries (25 Fig. M) on the machine body by inserting them into their housing (26 Fig. M).
- Press the batteries (25 Fig. M) until you hear the "CLICK" of attachment.
- To remove the batteries, press the release button (27 Fig. N) and remove the batteries (25 Fig. N).

USE OF THE APPLIANCE



NOTE:

The appliance may only be used if the paper bag is correctly installed.

- The appliance is equipped with wheels and can therefore be pulled along using the flexible hose during use.
- To lift the appliance, insert your fingers into the handle provided (28 Fig. O).

Starting the appliance

(For cord models)

- Insert the plug (29 Fig. P) into the power socket.
- Press the switch (30 Fig. Q) to "I" to start suction.

(For battery model)

- Press the switch (31 Fig. Q) to "I" to start suction in "STANDARD" mode, or to "II" for suction in "BOOST" mode.



NOTE:

You can adjust the suction force by acting on the selector (32 Fig. R) located on the ergonomic handle (10 Fig. R). Opening the window (33 Fig. R) results in less suction action.

(For battery-powered model) for greater battery autonomy, we recommend turning the appliance off during transfers.

Switching off the appliance

- Press the switch (30/31 Fig. Q) to "O" to turn off the appliance.
- Hook the hose (11 Fig. S) into the appropriate slot (34 Fig. S).
- (For cord models) unplug the plug (29 Fig. P) from the power outlet, then wind the cord (35 Fig. S) and hook it into the appropriate slot (36 Fig. S).

Battery Charging

(For battery model)



NOTE:

Charge the battery when only 3 or less battery LEDs are on (37 Fig. T).

When the battery is low (3 flashes of LED 1), make sure that it does not remain in this condition for a long time so as not to reduce the life of the battery itself.

- On the control, check that the switch (31 Fig. Q) is in position "O".
- Remove the batteries as indicated in the paragraph "Installation/removal of batteries".
- Connect the power plug (38 Fig. T) of the charger (39 Fig. T) to the mains (the mains voltage and frequency must be equal to the corresponding values of the charger, shown on its nameplate).
- The operation lights (40 Fig. T) and the warning lights (41 Fig. T) turn on in succession for about 1 second and the built-in fans run for about 5 seconds.
- Insert the batteries all the way on the slide coupling (42 Fig. T).
- The operating light (40 Fig. T) on the charger flashes.



- Once charging is finished, the charger automatically switches to the maintenance charge.
- The batteries can stay inside the charger so they are always ready for use.
- The operating light (40 Fig. T) on the charger turns on permanently.



NOTE:

To view the charge level of the lithium-ion batteries, first remove the battery from the charger, then press the button on the battery (43 Fig. T).



NOTE:

You can recharge the batteries even if they are not completely flat without compromising their lifespan.

- Once the batteries are fully charged, re-install them in the appliance as indicated above.



NOTE:

When the vacuum cleaner is in operation, LED 4 on the battery flashes every 15 seconds, this indicates that the battery is working correctly.



NOTE:

Never put the appliance away after use with flat batteries. If necessary, recharge the batteries. For prolonged periods of storage of the appliance and the batteries, periodically check the charge status.

CLEANING AND MAINTENANCE



DANGER:

Before carrying out any maintenance operation, remove the plug from the power socket or the batteries depending on the model.

Removal and replacement dust collector filter fleece

- Release the levers (1 Fig. A) and remove the cover (2 Fig. B) complete with motor.
- (For FT cord model) Remove the polyester filter (3 Fig. B).
- Remove the fleece dust bag (5 Fig. U).
- Lift the bar (44 Fig. U) until the hole (45 Fig. U) is closed by the lower cover (46 Fig. U) and then discard it.
- Fit a new fleece dust bag (5 Fig. D) as indicated above.
- Reassemble everything in reverse order to disassembly.

Checking and cleaning the polyester filter

(For FT cord model)

- Release the levers (1 Fig. A) and remove the cover (2 Fig. B) complete with motor.
- Remove the polyester filter (3 Fig. B).
- Clean the filter (3 Fig. V) from the inside out with a jet of air; the filter (3 Fig. V) can be washed in warm water and reassembled only after it has dried completely. If it is too dirty, replace it.
- Reassemble everything in reverse order to disassembly.

Checking and cleaning the filter cartridge

(For FC cord and battery models)

- Release the levers (1 Fig. A) and remove the cover (2 Fig. B) complete with motor and cartridge filter (4 Fig. C).
- Unscrew the central knob (47 Fig. W) and remove the filter cartridge (4 Fig. W).
- Clean the filter (4 Fig. Y) from the inside out with a jet of air; if it is too dirty, replace it.
- Reassemble everything in reverse order to disassembly.

Cleaning the appliance body

- Clean the appliance body using a cloth dampened with water or a neutral detergent.



DANGER:

Do not wash the unit with water jets.

SPARE PARTS

Polyester filter	Cod. 6595000
Pack of 10 fleece filter bags	Cod. 6596010
Pack of 10 paper filter bags	Cod. 6595030
Cartridge filter	Cod. 6595006
HEPA filter	Cod. 6595007

Battery

Battery 10,0 Ah	Cod. 7549002
-----------------	--------------


Battery charger

Battery charger EU	Cod. 7549050
Battery charger CH	Cod. 7549054
Battery charger AUS	Cod. 7549053
Battery charger UK	Cod. 7549051

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
(For cord models) The vacuum cleaner does not work.	Switch is not pressed.	Press the switch.
	Device is not plugged in.	Insert the plug into the socket.
	Lack of electricity.	Check power line.
(For battery model) The vacuum cleaner does not work (for 24V model).	Discharged battery.	Recharge the battery.
	The battery is not inserted correctly.	Check if battery is inserted correctly.
	Battery exhausted.	Replace the battery.
	Charger not working.	The charger must be checked by a specialist.
The intake is not satisfactory.	Paper bag is full.	Replace dust collection bag.
	Filter elements are blocked.	Clean the filter elements.
	Accessories or hoses blocked.	Check and clean the hose and nozzle.
LED 1, LED 2 and LED 4 flash briefly on the battery every 15 sec.	Battery overvoltage - wire breakage.	Replace the battery.
The warning light lights up permanently on the charger and the battery is not recharged. 	Temperature too high/too low.	If the battery temperature is between 0°C and 50°C, the charging process starts automatically.
The warning light flashes on the charger. 	The battery is faulty.	Immediately remove the battery from the charger.
	The battery has not been fitted correctly on the slide coupling.	Mount the battery correctly on the slide coupling.

 DEALER



Riello Cleaning Machines S.p.A.

Registered Office

Via Enrico Fermi, 43 - 37136 Verona (VR) - Italy

Headquarters

Via Circonvallazione, 5 - 27020 Dorno (PV) - Italy

P. +39 0382 848811 - F. +39 0382 84668 - M. info@riellocm.com



ghibli.com - wirbel.it

