

PROBLEM	CAUSE	SOLUTION
Pressing the switch (34), the machine will not turn on.	Circuit switch to position "0". Power cable disconnected.	Press the power switch. Connect the cable.
The brush does not rotate.	Function card damaged. The touch sensor on the handle is defective. Brush motor damaged. Brush rotation enabling switch not pressed.	Replace. Replace. Replace. Press the switch.
Aspirator does not work.	Function card damaged. Intake motor damaged. Suction unit switch not pressed. Recovery tank full.	Replace. Replace. Press the switch. Empty, wash and clean the tank and the probes.
The machine does not dry well, leaving traces of water on the floor.	Aspirator off. Aspiration tube blocked. Dirty wiper. Recovery tank full. Dirty water filter clogged. Squeegee rubber blades worn.	Start up the aspirator. Check and if necessary clean the aspiration tube that connects the squeegee to the recovery tank. Clean the wiper. Empty the recovery tank. Clean the filter. Replace or turn over the squeegee rubber blades.

PROBLEM	CAUSE	SOLUTION
No water comes out.	Tank empty.	Fill the tank.
	Solenoid valve enabling switch not pressed.	Press the switch.
	Tap turned off.	Open the tap
	Filter blocked.	Clean the filter.
	Solenoid valve does not work.	Call the technical support service.
Insufficient floor cleaning.	Unsuitable brushes or detergent.	Use brushes or detergents which are suitable for the type of floor or dirt to be cleaned.
	Brush worn.	Replace the brush.