

PROBLEM	CAUSE	SOLUTION
The vacuum cleaner does not work.	Switch not pressed.	Press the switch.
	Plug not inserted.	Insert the plug into the socket.
	Power cut.	Check the power line.
Suction is not satisfactory.	Accessories or tubes clogged.	Check and clean the flexible hose and the suction nozzle.
	Suction nozzle squeegee worn or damaged.	Check and replace the squeegee.
Detergent dispensing not even.	Nozzle clogged.	Clean nozzle.
	Filter clogged.	Clean suction filter.
Detergent dispensing not working.	Switch not pressed.	Press the switch.
	Thermal protection enabled.	Wait approx. 30 second for automatic reset.